




Errors in Applanation Tonometry

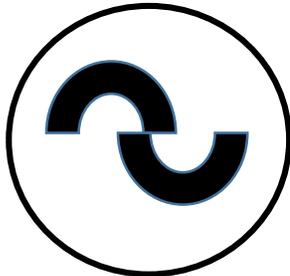


Too much Fluorescein
Have patient dab their eye

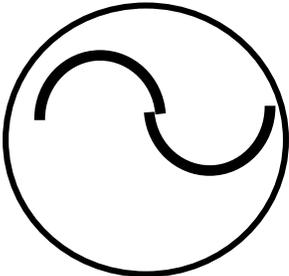


Too little Fluorescein
Add more Fluorescein

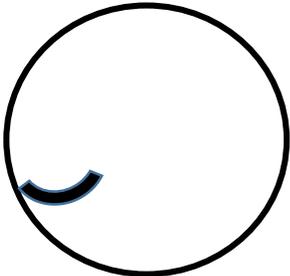


Prism tip too far to the left,
Bring tip more to the right

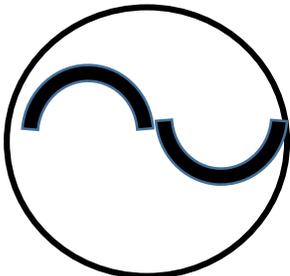


IOP too low, Turn dial up

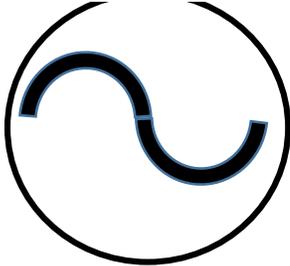


IOP still too low, Turn dial up

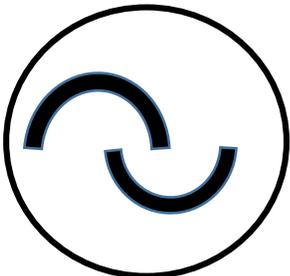


IOP too high, Turn dial down

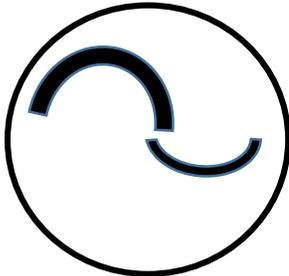

Prism tip is too high
Bring prism tip down

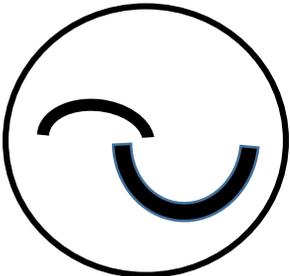

Prism tip is too Low
Bring prism tip up

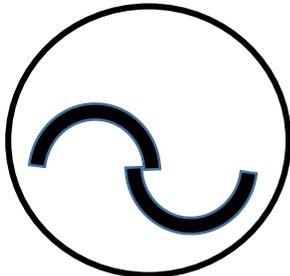

IOP just right,
Inner circles just touching